

Interactive Beep and LED Diagnostic

HP EliteDesk 800 35W/65W/95W G6

Welcome to the interactive beep and LED diagnostic viewer for the
HP EliteDesk 800 35W/65W/95W G6 DM

Here's how to use it...

[Beep & LED Diagnostic](#) (Click the link to navigate this platform's diagnostic codes)

On this page you will find a diagnostic viewer with a menu of this product's diagnostic error features. To identify the diagnostic codes for an error feature, simply click that feature. To learn more about the behavior and meaning of the specific beep codes, click the beep code and review the information that presents in the right-hand pane. There is also a LED diagnostic, which you can review by hovering over the information icon on the image.

That's it! On every page there is a link that brings you back to the Welcome page.

BIOS

BIOS

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



Hardware

Hardware

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



Thermal

Thermal

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



System Board

System Board

Click a beep code in the Beep Codes column to learn more about that beep code.

Beep Codes	Description
------------	-------------



Network

Network

Click or hover your mouse over the information icon to learn more about the item.

